


## 1 Comp. Loc. Central Locking

### 1.1 Central Locking

- 1 - Front passenger door control module -J387  
☐ Under door trim
- 2 - Anti-theft alarm system sensor -G578-
- 3 - Right rear door control module -J389  
☐ Under door trim
- 4 - Comfort system central control module -J393  
☐ Under luggage compartment side trim (right-side)
- 5 - Fuel filler door unlock motor -V155-
- 6 - Rear lid motor 1 V444
- 7 - Vehicle positioning system interface control module J843 if equipped  
☐ Under luggage compartment side trim (right-side)
- 8 - Rear lid closing assist motor V382
- 9 - Rear lid motor 2 V445
- 10 - Rear lid control module -J605
- 11 - Left rear door control module -J388  
☐ Under door trim
- 12 - Driver door control module -J386  
☐ Under door trim
- 13 - Engine hood contact switch -F266-

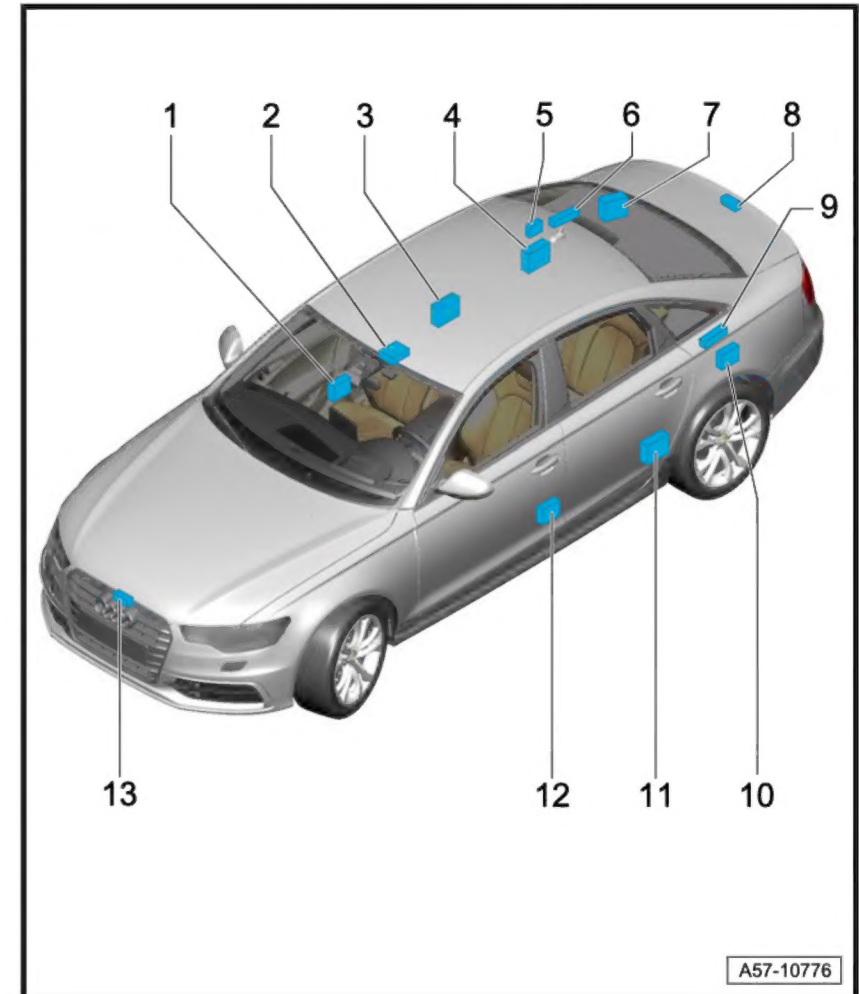

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the express permission of AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A57-10776